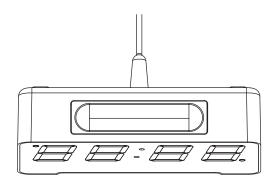
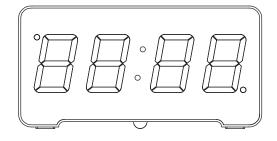
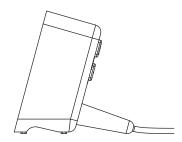
USER MANUAL







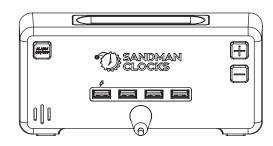


TABLE OF CONTENTS

I. PRODUCT DESCRIPTION
II. PRODUCT LAYOUT
III. INSTALLATION
IV. USB WIRING
V. HOW TO USE IT
VI. WARRANTY & SUPPORT

Check out www.sandmanclocks.com/support for an FAQ and updates to this manual.

I. PRODUCT DESCRIPTION

The Sandman Clock is a 4-port USB charging station with an integrated alarm clock.


FEATURES:


- 4x total USB ports
- Large 1.8" digits
- 1x high-powered USB port
- Alarm function with snooze
- Daily alarm function
- Battery backup (internal non-user-replaceable)
- Integrated cable management
- Adjustable auto-brightness
- 24-Hour time mode
- Small footprint
- Neutral design fits any decor
- Non-slip rubber feet
- Simple and intuitive controls
- Red LED's for low power consumption and to not harm your night vision

II. PRODUCT LAYOUT

BUTTONS:


- + PLUS
- - MINUS
- ALARM ON/OFF
- TOP BUTTON

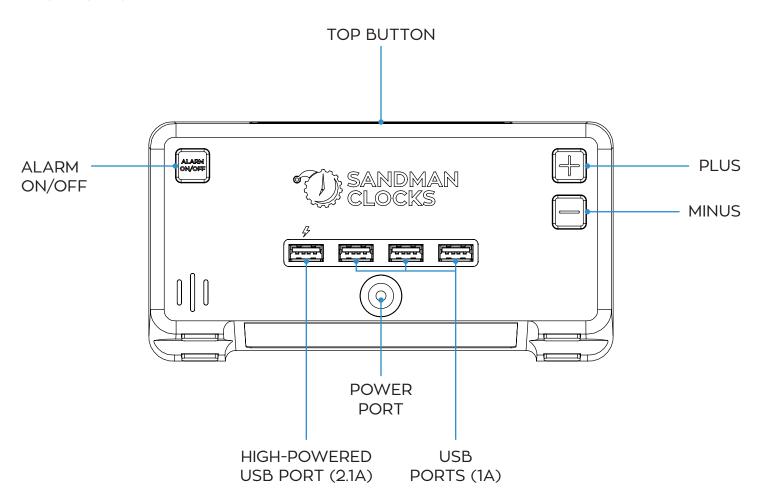

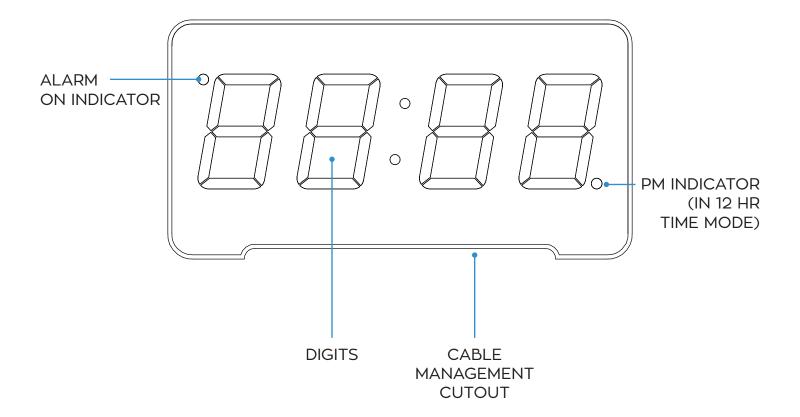

III. INSTALLATION


The Sandman Clock features a power plug with a unique peg shroud.

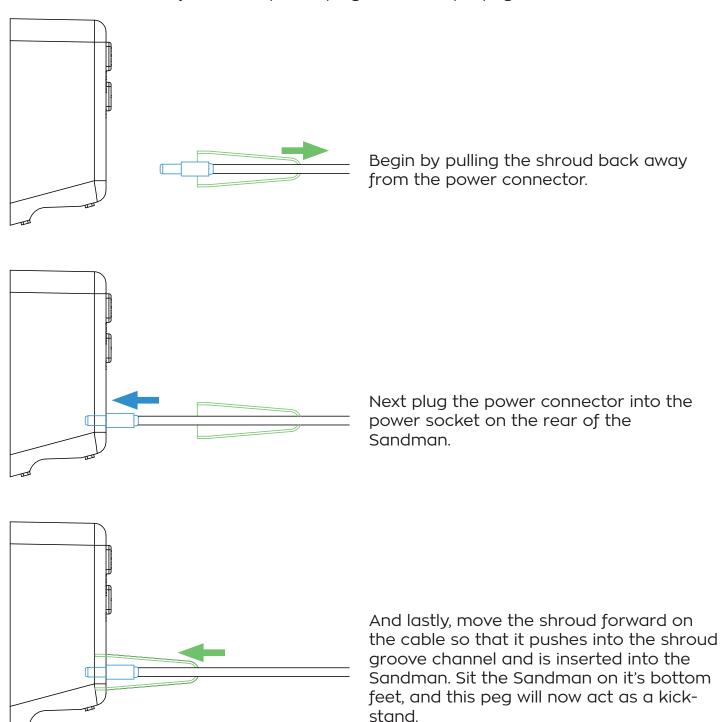

IV. USB WIRING

The Sandman is versatile in that it allows for several configurations of wiring your USB cables to the front of the clock, depending on space and preference.

- Route to the front via the under-body cut-out
- Route under and through the side cut-out
- · Route around the back and side

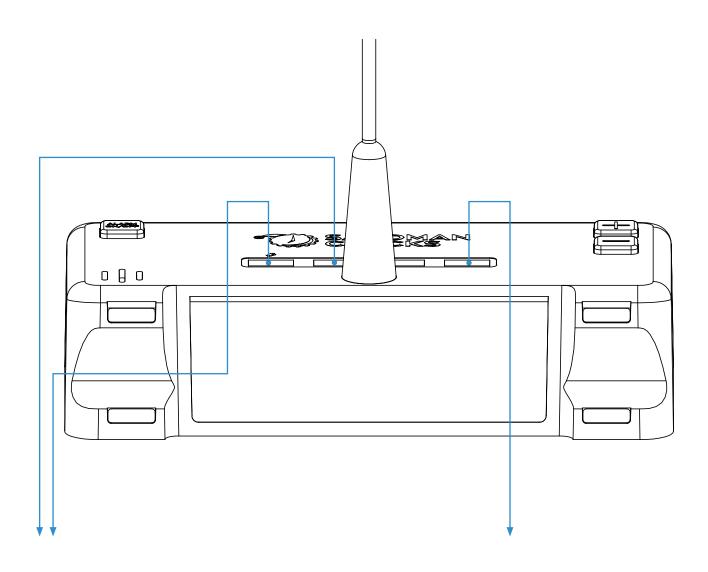

V. HOW TO USE IT

The Sandman has a simple interface with only 4 buttons.
SET TIME:
To set the time, simply tap or hold the \bigoplus or \bigoplus buttons to get to the correct time.
Note that the PM indicator dot on the bottom right of the screen will show in 12 hour time mode.
CHANGE BETWEEN 12/24 HOUR TIME:
To change the display between 12 hour and 24 hour time mode, simply press the
and buttons at the same time once. The clock will display: "12:hr" or "24:hr" to
confirm.
SET ALARM:
To set the alarm, simply hold the hutton until the digits blink. Then press the
or button to adjust the alarm time. Once done, press the button
again and the alarm will be set.
Note that the Alarm indicator dot is at the top left of the screen. When the dot is lit, the alarm is on
SNOOZE ALARM:
To snooze, simply press the TOP BUTTON. This will delay the alarm buzzer for 9 mins.
TURN ALARM ON OR OFF:
To turn the alarm on or off, press the button. The indicator light at the top left of
the display will light when the alarm is on and it will not show when the alarm is off.

ADJUST BRIGHTNESS:

The Sandman will automatically adjust its brightness via a light sensor in the front. In a dark room, it will go into Night Mode and the digits will dim. In a well lit room, it will go into Day Mode and the digits will brighten up to max to be visible across a room.

Note that some lighting may not be dark enough or bright enough to trigger this.

If you'd like to adjust the brightness of the clock manually in either Night Mode or Day Mode, be sure to be in a room with the appropriate darkness or light, then simply hold the TOP BUTTON and press or light, then simply hold the display is very dim or off, simply press the TOP BUTTON and the display will temporarily brighten up.

ADVANCED FEAUTRES:

Daily alarm:

The Sandman has the ability to have the alarm go off at the same time every day.

To turn this on, enter alarm mode by holding down the button until the clock says "AL:Ar". Then press the TOP BUTTON until the clock says "da:ly", the alarm dot indicator will flash quickly. Now when the alarm is turned off it automatically turns back on and will sound again in 24 hours. To go back to the original mode, hold down the TOP BUTTON while in alarm mode until the Sandman displays "ON:cE".

Changing the alarm sound:

If the Sandman alarm is not loud enough for you, hold down the button until it start to beep and displays "Lo". At this point you can press the for buttons to switch between "Lo" and "Hi" alarm tones.

AUTO DIMMING ADJUSTMENT:

The Sandman has a brightness sensor located on the bottom left corner of the screen that measures the brightness of its environment. Sometimes the Sandman has a hard time with the lighting in certain rooms, this will help you adjust it.

Before starting this process make sure you have dimmed the display to the desired brightness in the current lighting conditions. See "ADJUST BRIGHTNESS" previously mentioned in the manual.

Enter brightness mode by holding the ALARM and TOP BUTTON at the same time until the

screen says "**bri**". At the point the Sandman will show a number and either "**da**" for day or "**ni**" night. The number will show how bright the Sandman thinks it is in the room on a scale from 0 - 99.

At this point the Sandman is ready to remember the lighting conditions for either day or night.

Press the button if it's currently day.

Press the button if it's currently night.

AT THIS POINT STEP AWAY FROM THE SANDMAN.

The Sandman will count down from 3 and then it will automatically set your Sandman auto-dim threshold. If your Sandman does not auto-dim correctly try programming the other mode (day or night).

BATTERY BACKUP:

The Sandman features an internal rechargeable battery backup that is not user-replaceable. If the power would go out while an alarm is set, the alarm will still ring at the time it was set for.

VI. WARRANTY & SUPPORT

THIS LIMITED WARRANTY CONTAINS IMPORTANT INFORMATION ABOUT YOUR RIGHTS AND OBLIGATIONS, AS WELL AS LIMITATIONS AND EXCLUSIONS THAT MAY APPLY TO YOU.

1. WHAT THIS LIMITED WARRANTY COVERS; PERIOD OF COVERAGE

Palo Alto Innovation, LLC ("PAI"), 2045 Martin Ave, Suite 201, Santa Clara, CA, USA, warrants to the owner of the product listed in the title of this page ("Product") will be free from defects in materials and workmanship for a period of one (1) year from the date of delivery following the original retail purchase (the "Warranty Period"). If the Product fails to conform to this Limited Warranty during the Warranty Period, PAI will, at its sole discretion, either (a) repair or replace any defective Product or component; or (b) accept the return of the Product and refund the money actually paid by the original purchaser for the Product. Repair or replacement may be made with a new or refurbished product or components, at PAI's sole discretion. If the Product or a component incorporated within it is no longer available, PAI may, at PAI's sole discretion, replace the Product with a similar product of similar function. This is your sole and exclusive remedy for breach of this Limited Warranty. Any Product that has either been repaired or replaced under this Limited Warranty will be covered by the terms of this Limited Warranty for the longer of (a) ninety (90) days from the date of delivery of the repaired Product or replacement Product, or (b) the remaining Warranty Period. This Limited Warranty is transferable from the original purchaser to subsequent owners, but the Warranty Period will not be extended in duration or expanded in coverage for any such transfer.

2. TOTAL SATISFACTION RETURN POLICY

If you are the original purchaser of the Product and you are not satisfied with this Product for any reason, you may return it in its original condition within thirty (30) days of the original purchase and receive a full refund.

3. WARRANTY CONDITIONS; HOW TO GET SERVICE IF YOU WANT TO CLAIM UNDER THIS LIMITED WARRANTY

Before making a claim under this Limited Warranty, the owner of the Product must (a) notify PAI of the intention to claim by visiting www.sandmanclocks.com/support during the Warranty Period and providing a description of the alleged failure, and (b) comply with PAI's return shipping instructions. PAI will have no warranty obligations with respect to a returned Product if it determines, in its reasonable discretion after examination of the returned Product, that the Product is an Ineligible Product (defined below). PAI will bear all costs of return shipping to owner and will reimburse any shipping costs incurred by the owner, except with respect to any Ineligible Product, for which owner will bear all shipping costs.

MADE BY PALO ALTO INNOVATION

4. WHAT THIS LIMITED WARRANTY DOES NOT COVER

This Limited Warranty does not cover the following (collectively "Ineligible Products"): Products marked as "sample" or "pilot unit" or "Not for Sale" or sold "AS IS"; or Products that have been subject to: (a) modifications, alterations, tampering, or improper maintenance or repairs; (b) handling, storage, installation, testing, or use not in accordance with the User's Guide or other instructions provided by PAI; (c) abuse or misuse of the Product; (d) breakdowns, fluctuations, or interruptions in electric power, or (e) Acts of God, including but not limited to lightning, flood, tornado, earthquake, or hurricane. This Limited Warranty does not cover accessory parts, including charging cables, unless damage is due to defects in materials or workmanship of the Product (even if such accessory parts are packaged or sold with the product). PAI recommends that you use only authorized service providers for maintenance or repair. Unauthorized use of the Product or accessories can impair the Product's performance and may invalidate this Limited Warranty.

5. DISCLAIMER OF WARRANTIES

EXCEPT AS STATED ABOVE IN THIS LIMITED WARRANTY, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, PAI DISCLAIMS ALL EXPRESS, IMPLIED, AND STATUTORY WARRANTIES AND CONDITIONS WITH RESPECT TO THE PRODUCT, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, PAI ALSO LIMITS THE DURATION OF ANY APPLICABLE IMPLIED WARRANTIES OR CONDITIONS TO THE DURATION OF THIS LIMITED WARRANTY.

6. LIMITATION OF DAMAGES

IN ADDITION TO THE ABOVE WARRANTY DISCLAIMERS, IN NO EVENT WILL PAI BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, EXEMPLARY, OR SPECIAL DAMAGES, INCLUDING ANY DAMAGES FOR LOST DATA OR LOST PROFITS, ARISING FROM OR RELATING TO THIS LIMITED WARRANTY OR THE PRODUCT, AND PAI'S TOTAL CUMULATIVE LIABILITY ARISING FROM OR RELATED TO THIS LIMITED WARRANTY OR THE PRODUCT WILL NOT EXCEED THE AMOUNT ACTUALLY PAID FOR THE PRODUCT BY THE ORIGINAL PURCHASER.

7. LIMITATION OF LIABILITY

THE PAI ONLINE SERVICES ("SERVICES") PROVIDE YOU INFORMATION ("PRODUCT INFORMATION") REGARDING YOUR SANDMAN CLOCKS PRODUCTS OR OTHER PERIPHERALS CONNECTED TO YOUR PRODUCTS ("PRODUCT PERIPHERALS"). THE TYPE OF PRODUCT PERIPHERALS THAT MAY BE CONNECTED TO YOUR PRODUCT MAY CHANGE FROM TIME TO TIME. WITHOUT LIMITING THE GENERALITY OF THE DISCLAIMERS ABOVE, ALL PRODUCT INFORMATION IS PROVIDED FOR YOUR CONVENIENCE, "AS IS", AND "AS AVAILABLE".

PAI DOES NOT REPRESENT, WARRANT, OR GUARANTEE THAT PRODUCT INFORMATION WILL BE AVAILABLE, ACCURATE, OR RELIABLE OR THAT PRODUCT INFORMATION OR USE OF THE PRODUCT WILL WAKE YOU UP OR CHARGE A POORLY-FUNCTIONING OR DAMAGED DEVICE. YOU USE ALL PRODUCT INFORMATION AND THE PRODUCT AT YOUR OWN DISCRETION AND RISK. YOU WILL BE SOLELY RESPONSIBLE FOR (AND PAI DISCLAIMS) ANY AND ALL LOSS, LIABILITY, OR DAMAGES, INCLUDING TO YOUR WIRING, ELECTRICITY, HOME, PRODUCT, PRODUCT ACCESSORIES, PRODUCT PERIPHERALS, MOBILE DEVICES, TABLETS, SMART WATCHES, FITNESS TRACKERS, AND ALL OTHER PETS AND ITEMS IN YOUR HOME, RESULTING FROM YOUR USE OF THE PRODUCT INFORMATION OR PRODUCT. PRODUCT INFORMATION PROVIDED BY THE

8. YOUR RIGHTS AND THIS LIMITED WARRANTY

This Limited Warranty gives you specific legal rights. You may also have other legal rights that vary by state, province, or jurisdiction. Likewise, some of the limitations in this Limited Warranty may not apply in certain states. The terms of this Limited Warranty will apply to the extent permitted by applicable law. For a full description of your legal rights you should refer to the laws applicable in your jurisdiction and you may wish to contact a relevant consumer advisory service.

You made it the end! Thanks for reading and enjoy your Sandman!